




**Tecnoplast®**  
PENSIERO INFISSO




MODELLI  
CONTEMPORANEI  
PANNELLI  
PORTONCINO


011

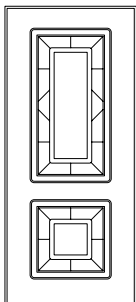


018

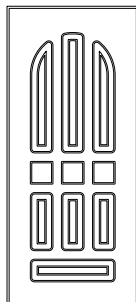


028

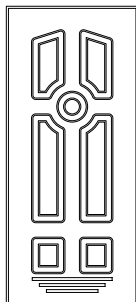


028-V02

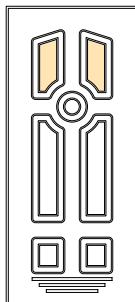


028-V04

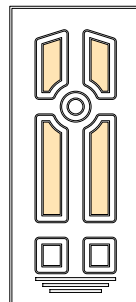


029

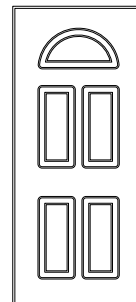


034

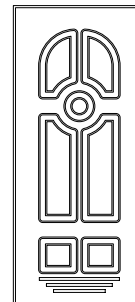


062

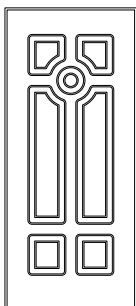


062-V02

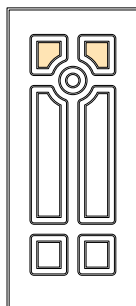


062-V04

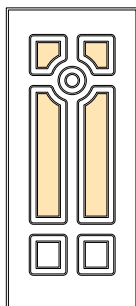


063

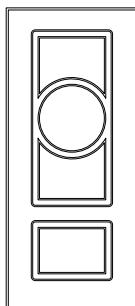


064

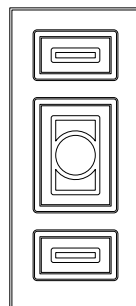


065

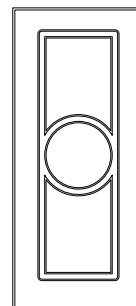


067

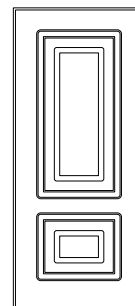


071 Dx

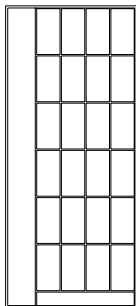


071 Sx

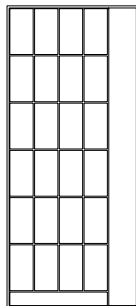


072 Dx

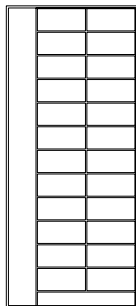


072 Sx

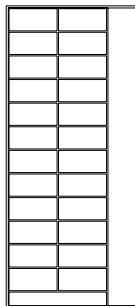


073 Dx

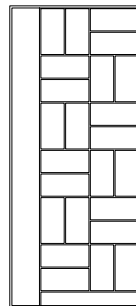


073 Sx

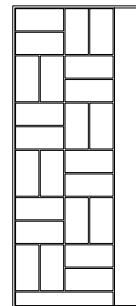


074 Dx

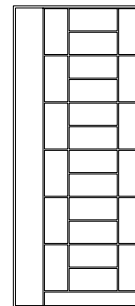


074 Sx

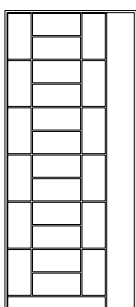


075 Dx

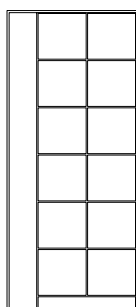


075 Sx

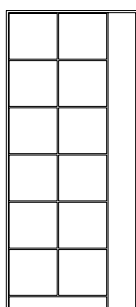


076 Dx




076 Sx

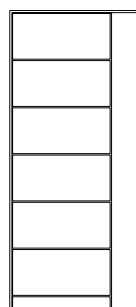


077 Dx

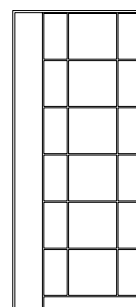


077 Sx

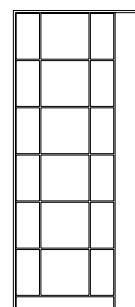


078 Dx

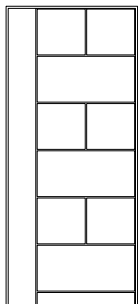


078 Sx

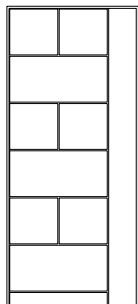


079 Dx

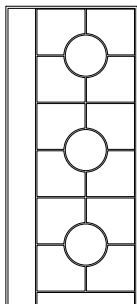


079-C

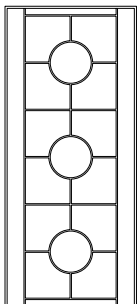


079 Sx

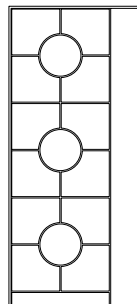


080 Dx

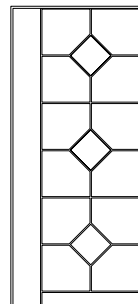


080-C

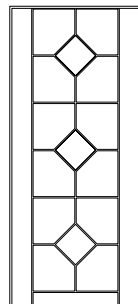


080 Sx

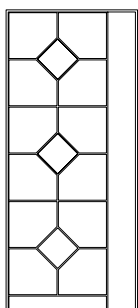


081 Dx

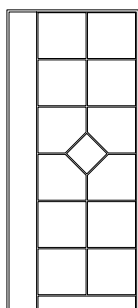


081-C

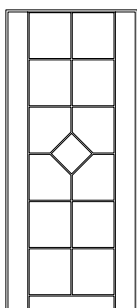


081 Sx

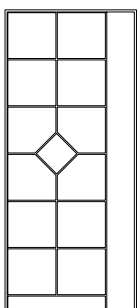


082 Dx

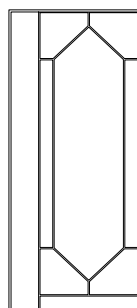


082 Sx

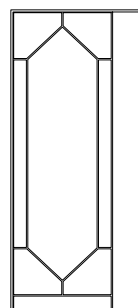


083 Dx




083 Sx




084 Dx

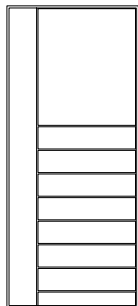


084 Sx

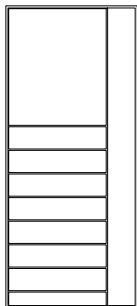


086

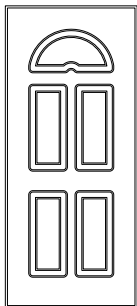


086-V01

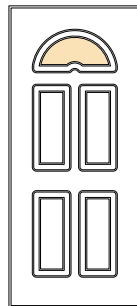


086-V03

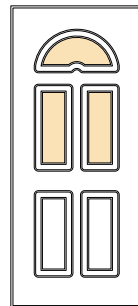


086-V05

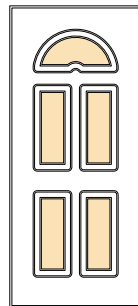


087

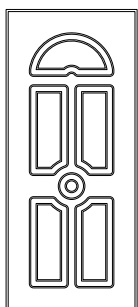


087-V01

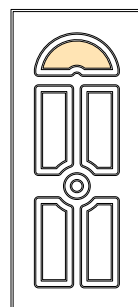


087-V03

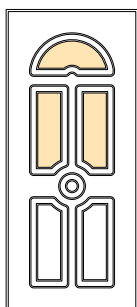


092 Sx

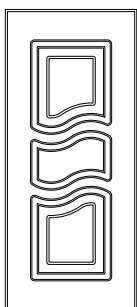


087-V05

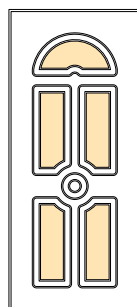


091

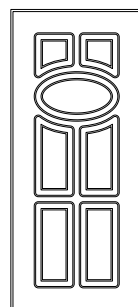


091-V01

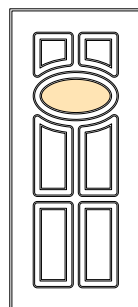


091-V03

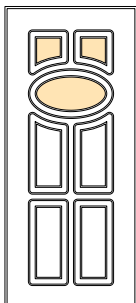


091-V05

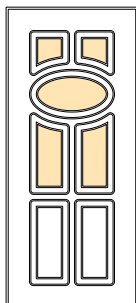


091-V07

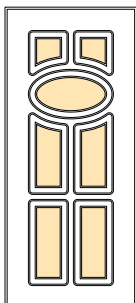


092.Dx

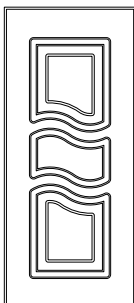


094

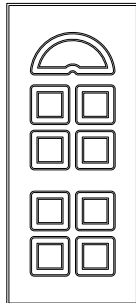


094-V01

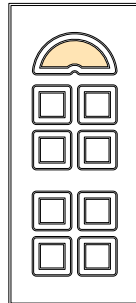


094-V05

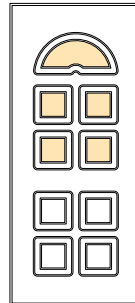


094-V09

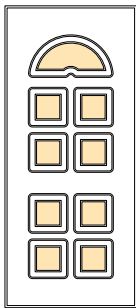


095

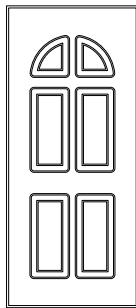


095-V02

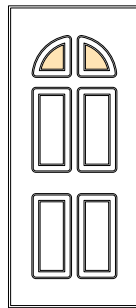

095-V04

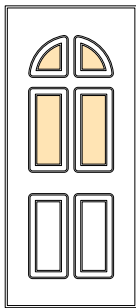

095-V06

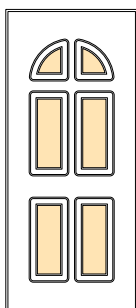


096




096-V01




096-V03

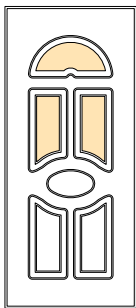


096-V05

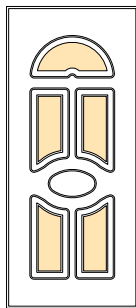


097

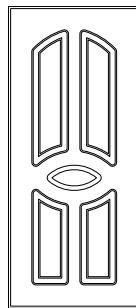


099

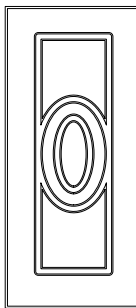


100

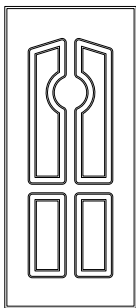


100-V02

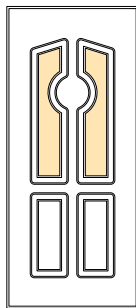


100-V04

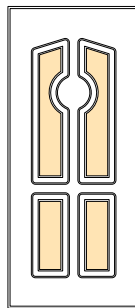


101

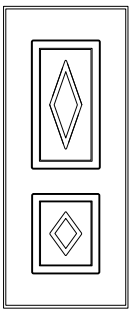


104

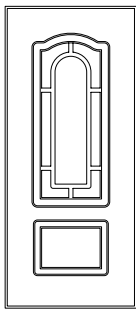


106

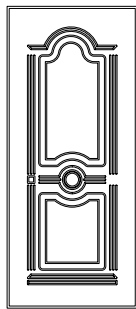


109

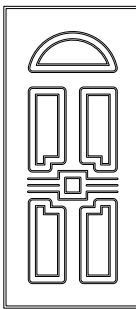


110

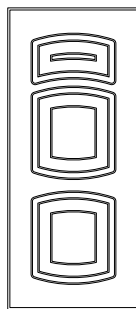


111

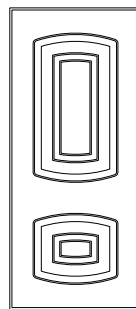


114

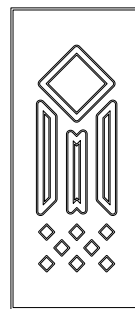


114-V01

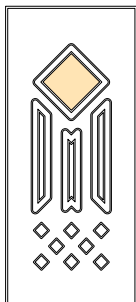


115

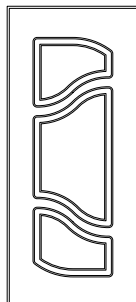


116

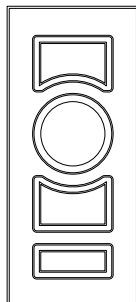


119

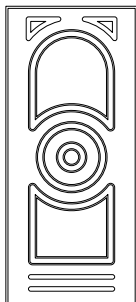


128

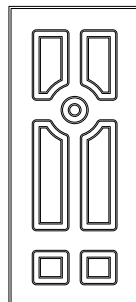


128-V02

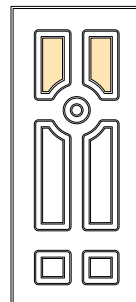


128-V04

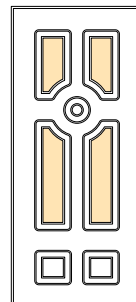


130

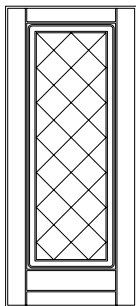


131

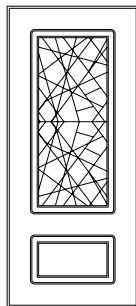


132

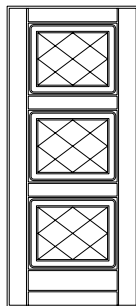

136 Dx

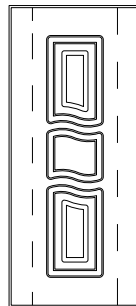

136 Sx

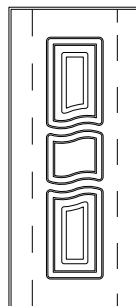


141 Dx




141 Sx




142

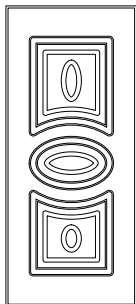


143

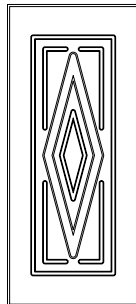


144

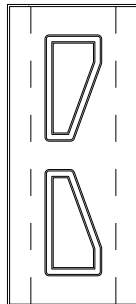


145

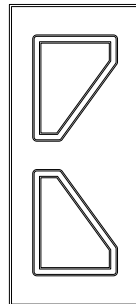


146

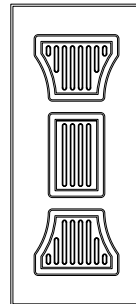


147

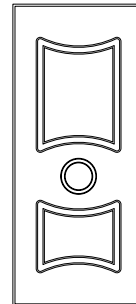


149

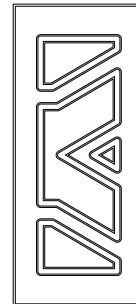


150

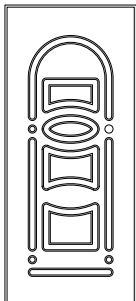


152

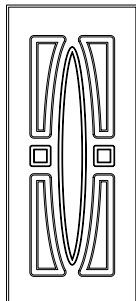


153

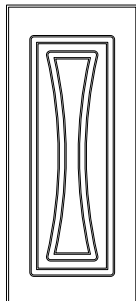


154

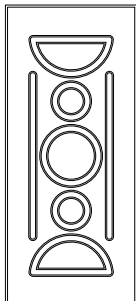


155

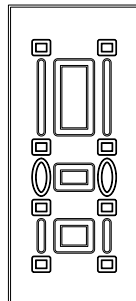


157

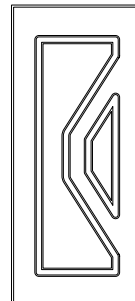


158

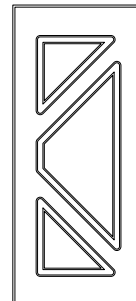


159

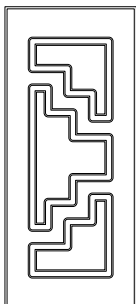


160

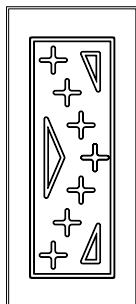


164

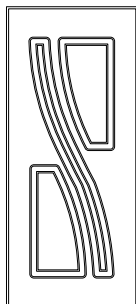


165

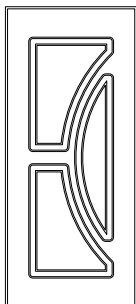


166

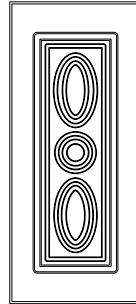


168

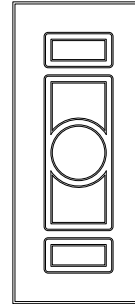


169

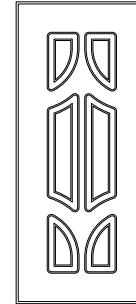


169-V02

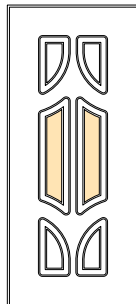


169-V06

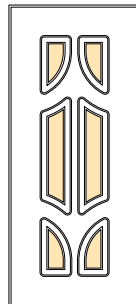


170

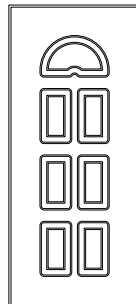


173 Dx

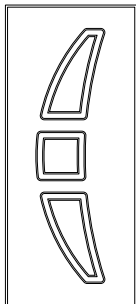


173 Sx

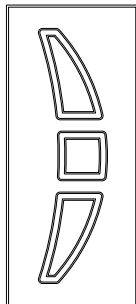


173-V03 Dx

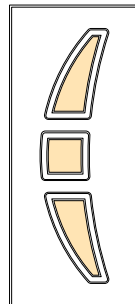


173-V03 Sx

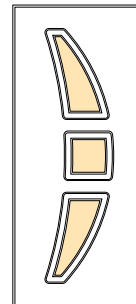


174 Dx

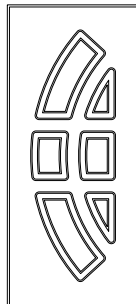


174 Sx

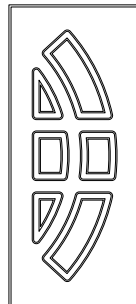


174-V03 Dx

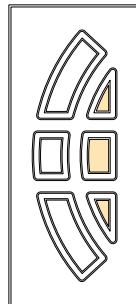


174-V03 Sx

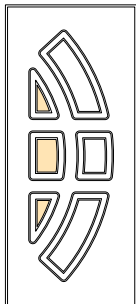


174-V06 Dx

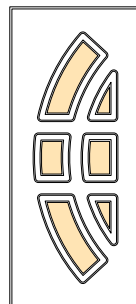


174-V06 Sx

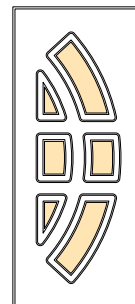


175

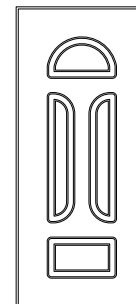


175-V01

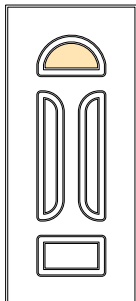


175-V03

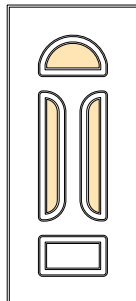


182

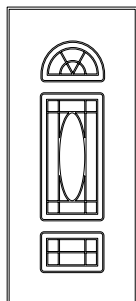


184

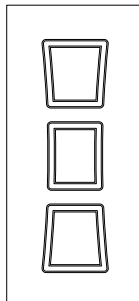


184-V01

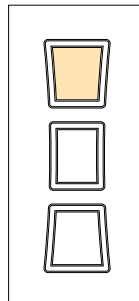


184-V03

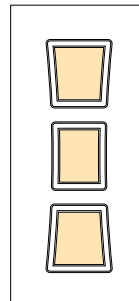


185

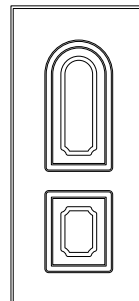


186

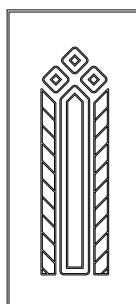


186-V01

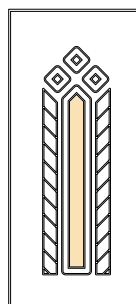


186-V04

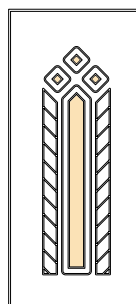


187

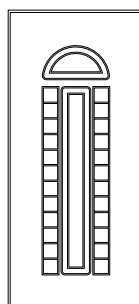


187-V01

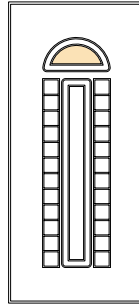


187-V02

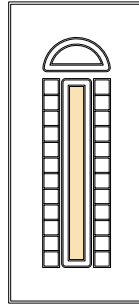


188

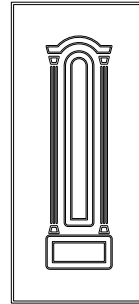


188-V01

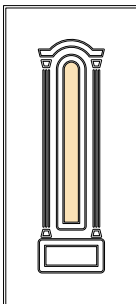


189

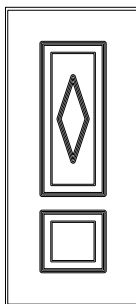


189-V01

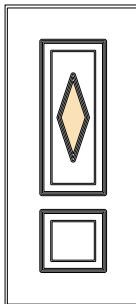


195

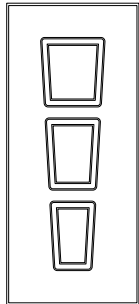


195-V01

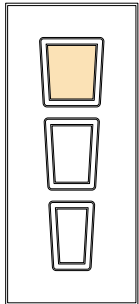


195-V03

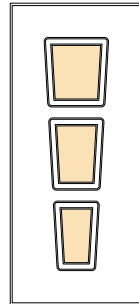


306 Dx

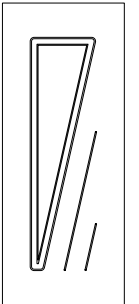


306 PL Dx

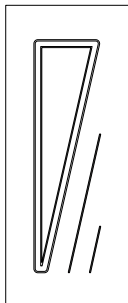


306-V01 Dx

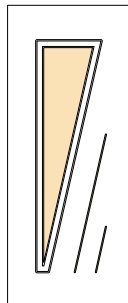


317 Dx

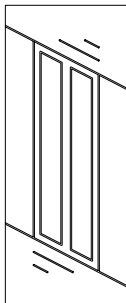


317 PL Dx

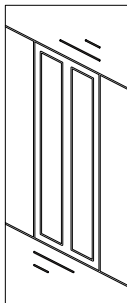


317-V02 Dx

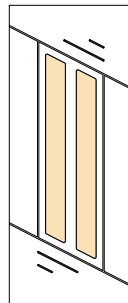


322 Sx

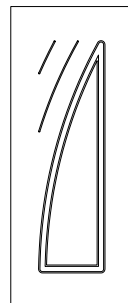


322 PL Sx

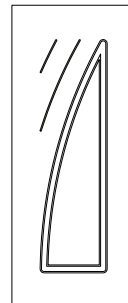


322-V01 Sx

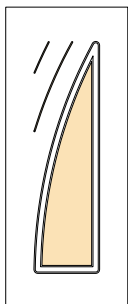


325 Dx

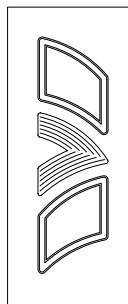


325 OS Dx

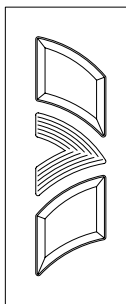


325-V01 Dx

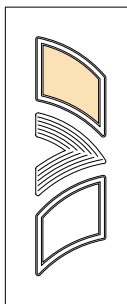


325-V02 Dx

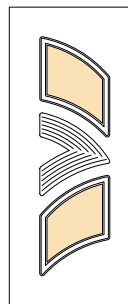


325 PN Dx

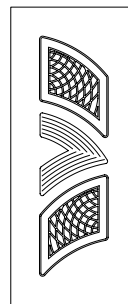


336

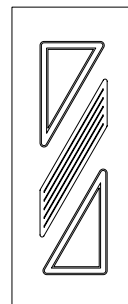


336-V01

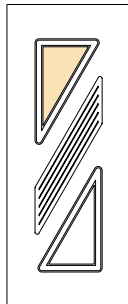


336-V02

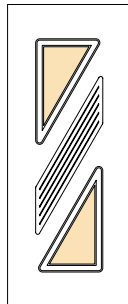


339

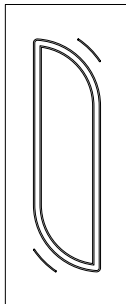


339-V01

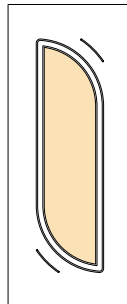

339 PL

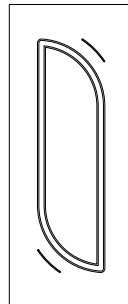

344

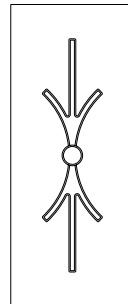

344 PL

