



Tecnoplast®
PENSIERO INFISSO


MODELLI
MODERNI

PANNELLI
PORTONCINO




PANNELLI PORTONCINO **MODELLI MODERNI**


031

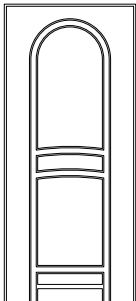


032

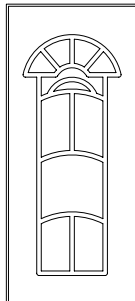


035

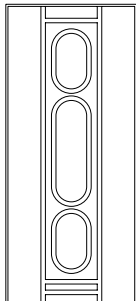


036

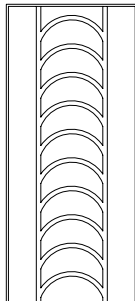


037

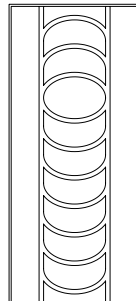


038

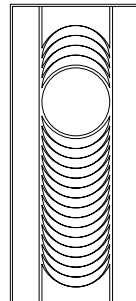


039

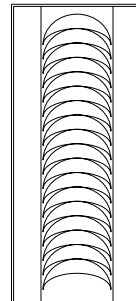


129 Dx

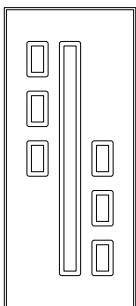


129 Sx

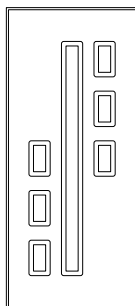


129-V01 Sx

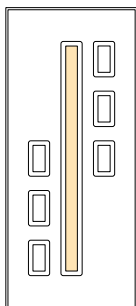


129-PL Sx

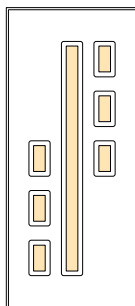


138 Dx

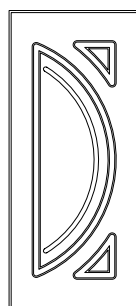


138 Sx

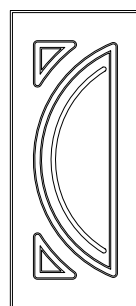


171

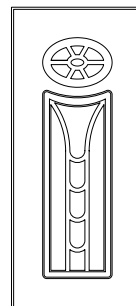


171-V01

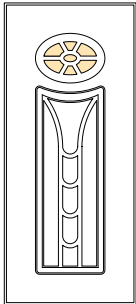


171-PL

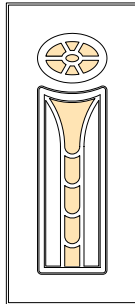


172-PL

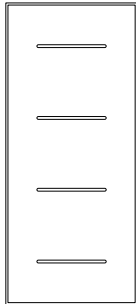


176 Sx

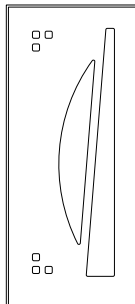


176 Dx

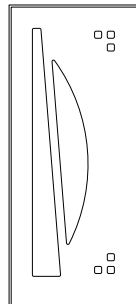


176-PL Dx

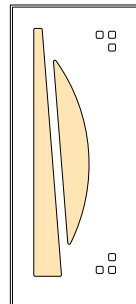


177 Dx

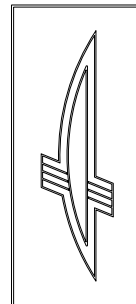


177 Sx

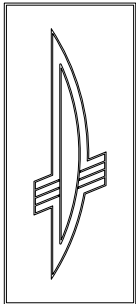


177-V01 Sx

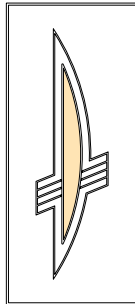


177-PL Sx

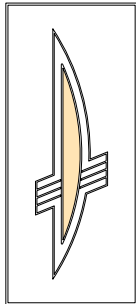


178

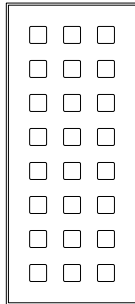


178-PL

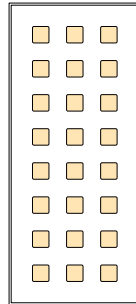


179

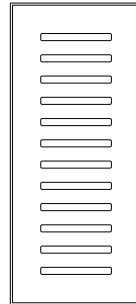

179-PL

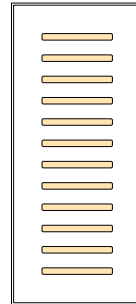


PANNELLI PORTONCINO **MODELLI MODERNI**

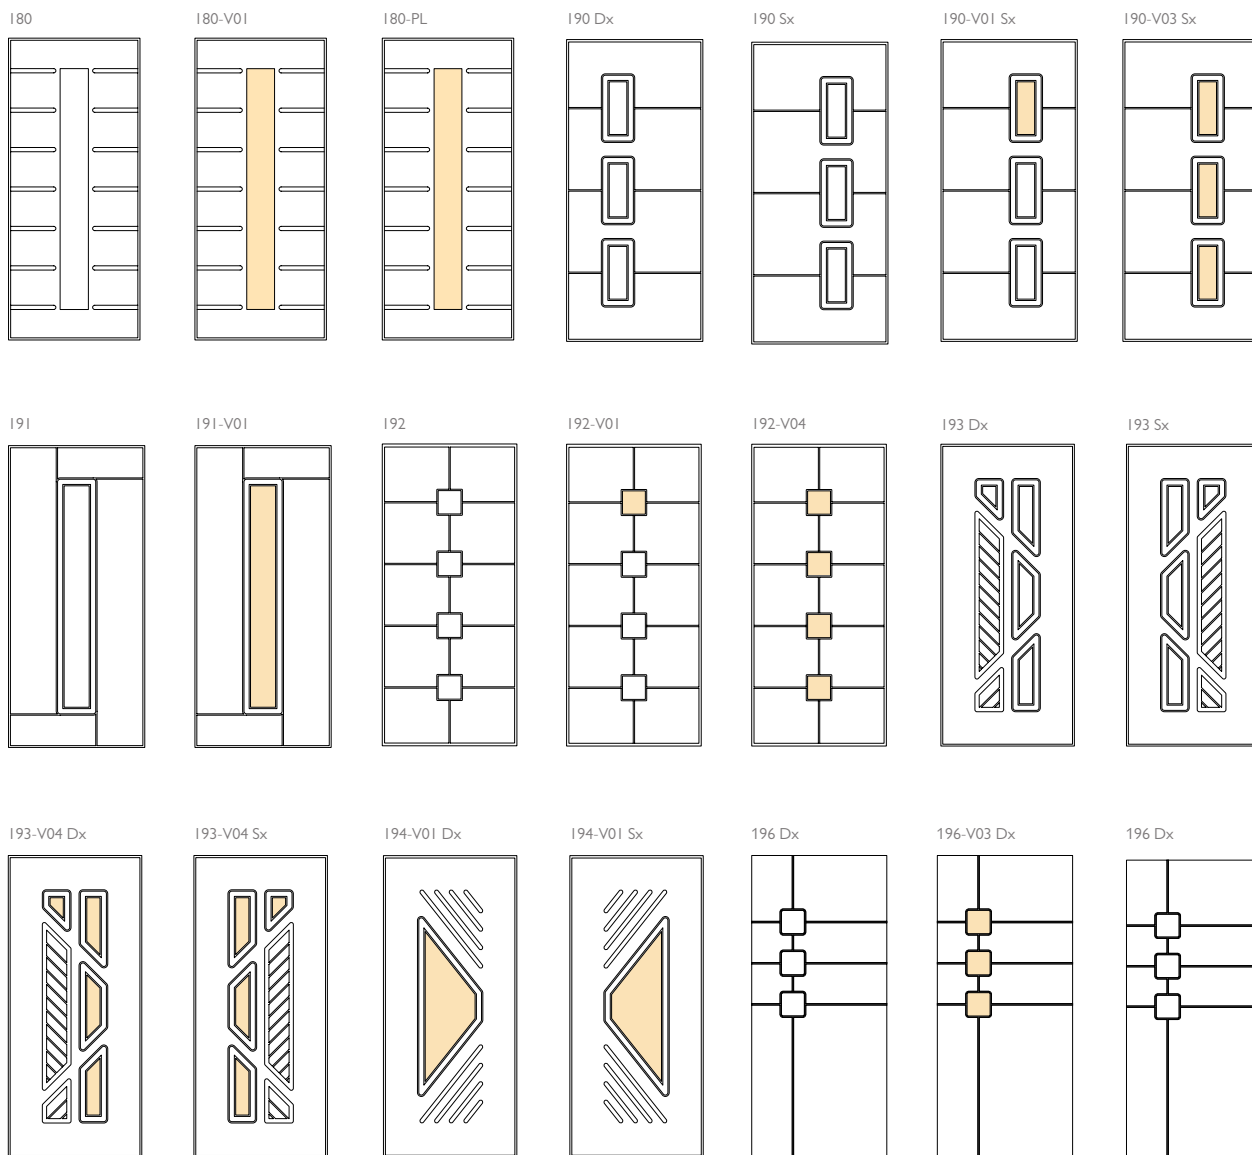


PANNELLI PORTONCINO **MODELLI MODERNI**


196-V03 Dx

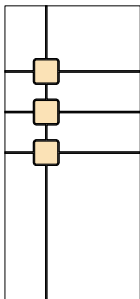


197 Sx

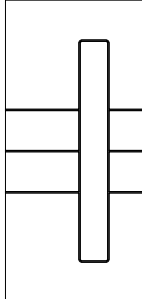


197-V01 Sx

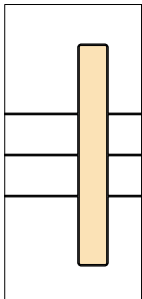


198

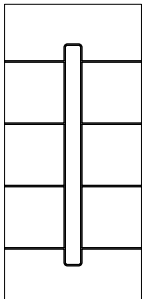


198-V01

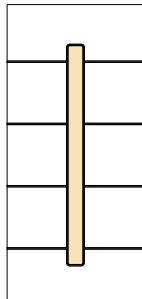


199-V02 Dx




200 Dx




200 Sx

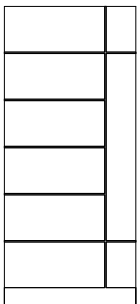


300

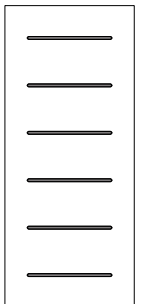


301 Sx

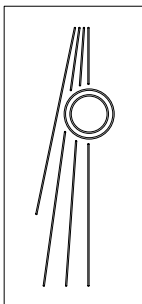


301 PL Sx

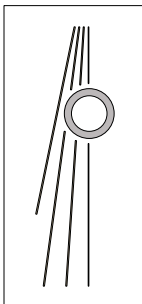


301-V01 Sx

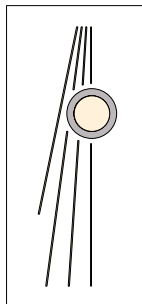


302

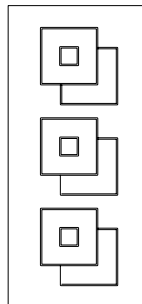


302 PL

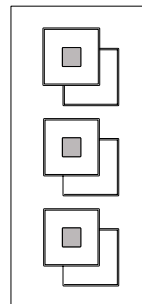


303

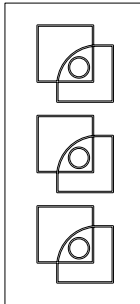


303 PL

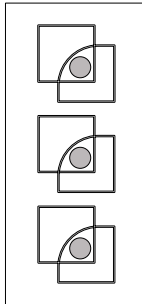


304

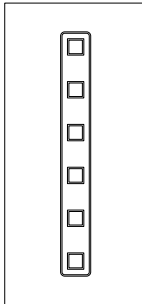


304-V01

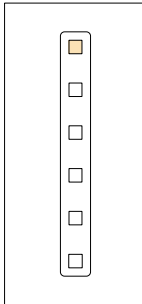


304-V06

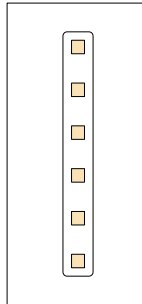


305

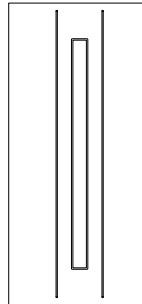


305 PL

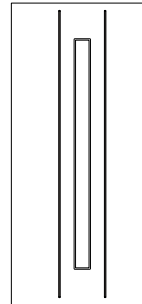


305-V01

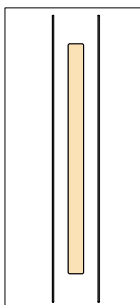


307 Dx

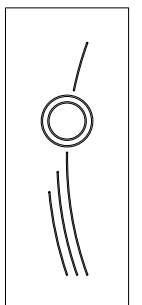


307 PL Dx

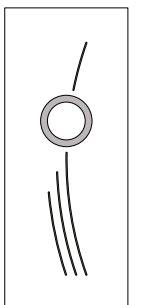


307-V01 Dx

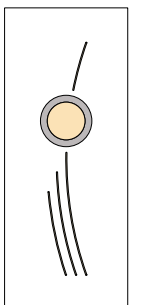


308

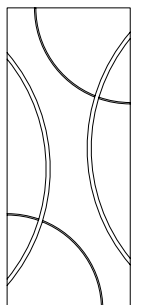

308 PL

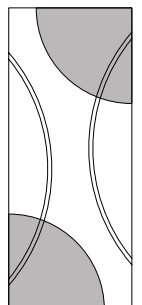


309 Dx

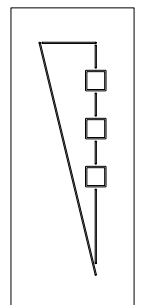


PANNELLI PORTONCINO **MODELLI MODERNI**


309 PL Dx

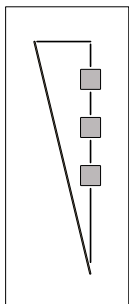


310 Dx

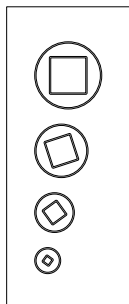


310-V01 Dx

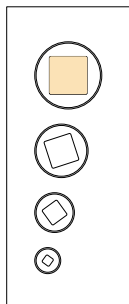


310-V04 Dx

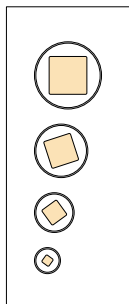


312

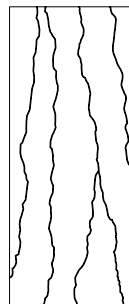


313

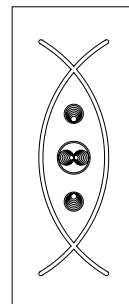


314

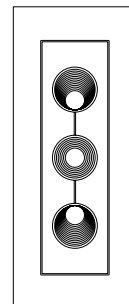


315 Sx

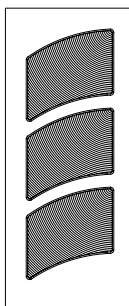


316 Sx

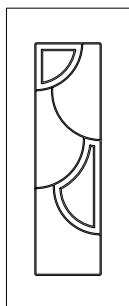


318 Sx

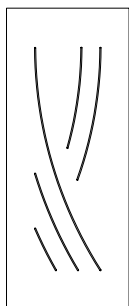


318 PL Sx

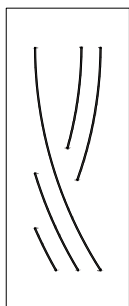


319 Sx

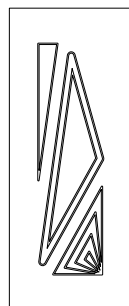


319-V01 Sx

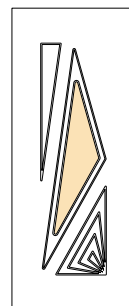


320

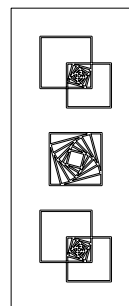


320 PN

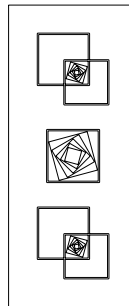


321 Sx

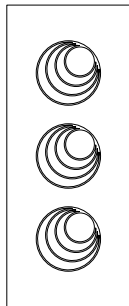


321 PL Sx

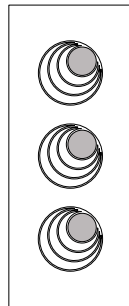


323

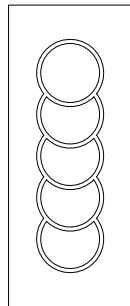


323 PL

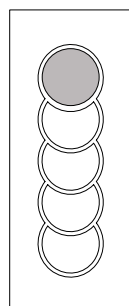

323-V01

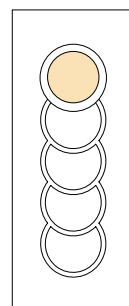


324

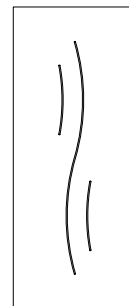


324 PL




326 Dx

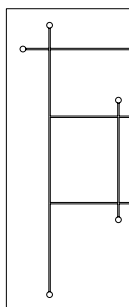


326 PL Dx

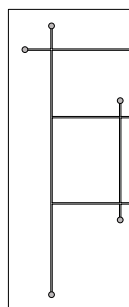


327 Dx

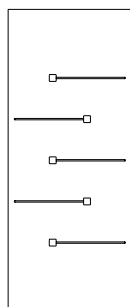


327 PL Dx

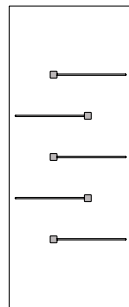

328 Sx

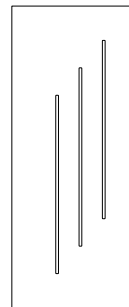


328 PL Sx

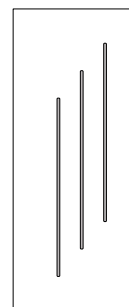


PANNELLI PORTONCINO **MODELLI MODERNI**


329 PL




330 PL




331

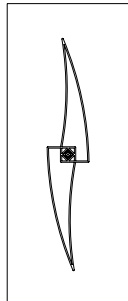


332

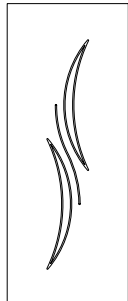


332 PL

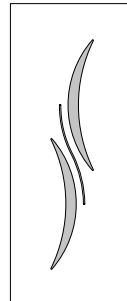


333 Sx

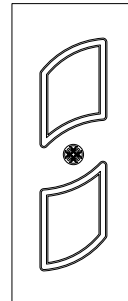


333-V01 Sx

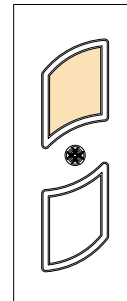


333-V02 Sx

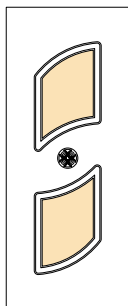


334

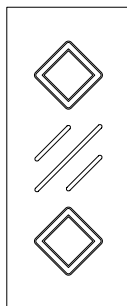


334-V01

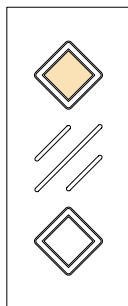


334-V02

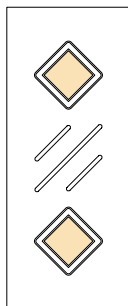


334 PL

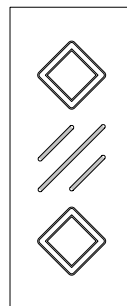


335

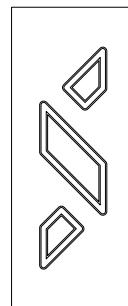


335-V01

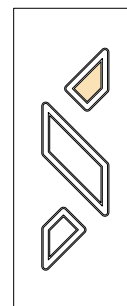


335-V02

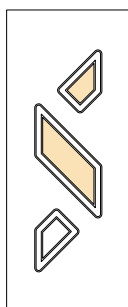


335-V03

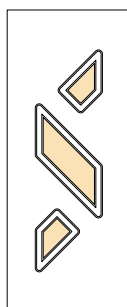


335 PL

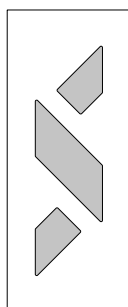


337

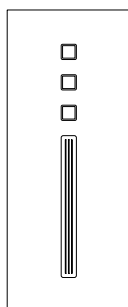


337 PL

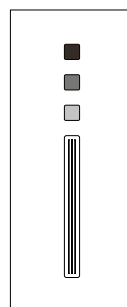


338

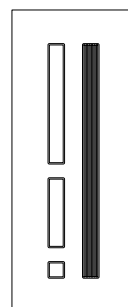


338 PL

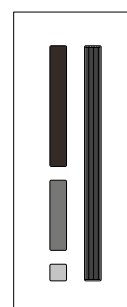


340

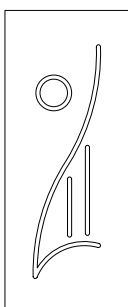


341

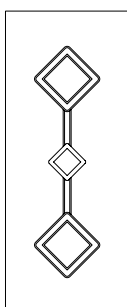


341-V01

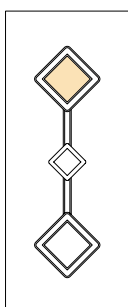


341-V02

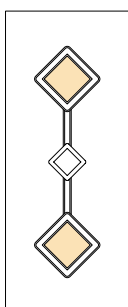


341 PL

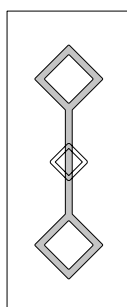

342

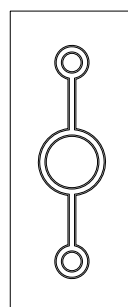


342-V01

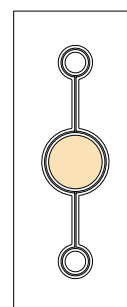


PANNELLI PORTONCINO **MODELLI MODERNI**


342-V03

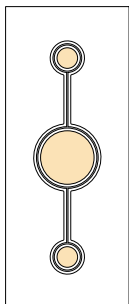


342 PL

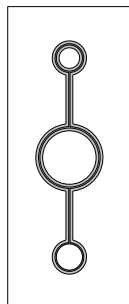


343

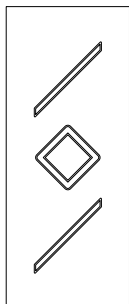


343-V01

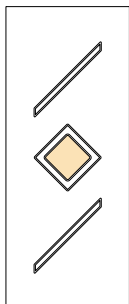


343 PL

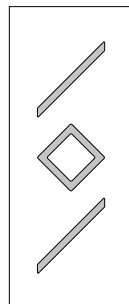


345

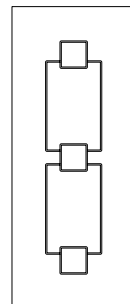


345-V01

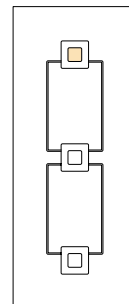


345-V02

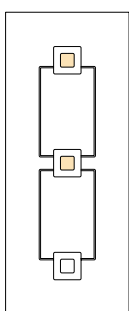


345-V03

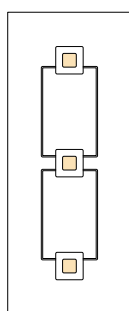


345 PL

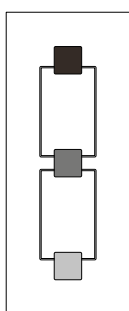


346

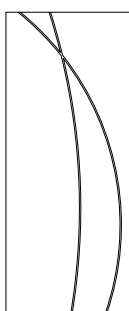


346 PL

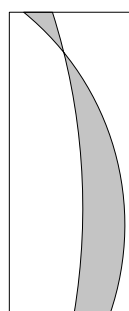


347

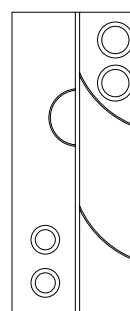


348

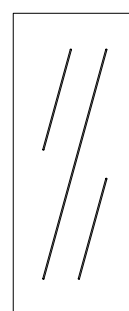


348 PL

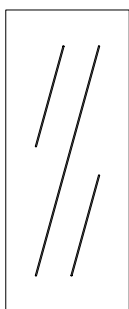


349

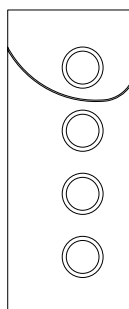


349 PL

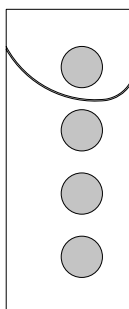


350

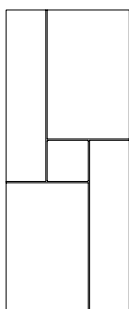


350 PL

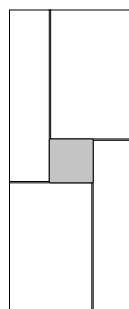


351

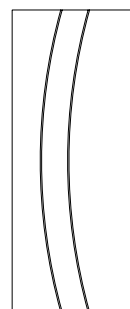


351 PL

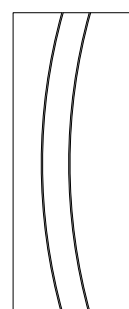


352

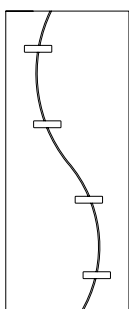


352 PL

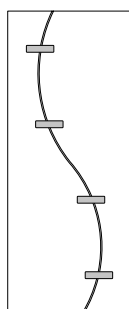


353

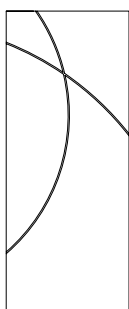


354

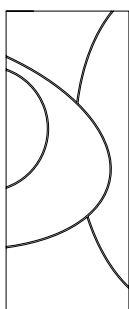

355

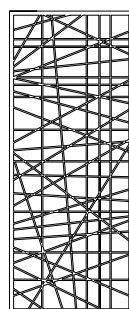

356

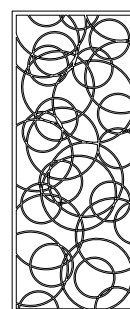


357




PANNELLI PORTONCINO **MODELLI MODERNI**


358 Sx

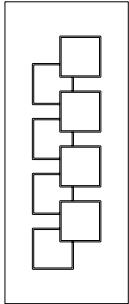


358 PL Sx

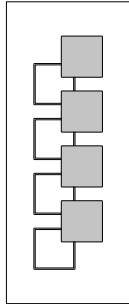


358-VO1 Sx

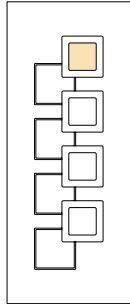


358-VO4 Sx

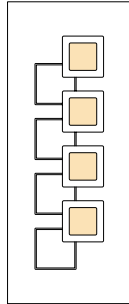


359 Dx

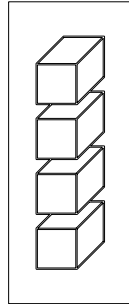


359 PL Dx

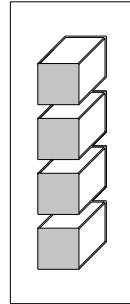


359-VO1 Dx

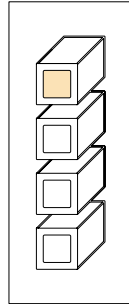


359-V04 Dx

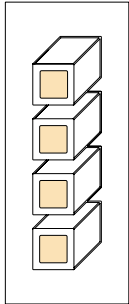

360

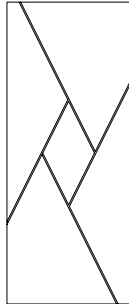

360 PL

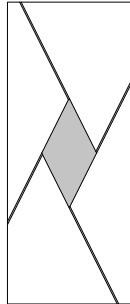

360-V01

